


BACKRACK™

BACKRACK™ • SAFETY RACK • LOUVERED RACK • INSERT RACK • ACCESSORIES • SIDERAILS

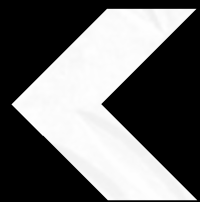

OPEN FOR APPLICATIONS

MOUNTING OPTIONS



STANDARD
No Drill
Example: 30119



TOOLBOX
No Drill
Example: 30119TB



LOW PROFILE DRILL
Drilling Required
Example: 30119LP

THE ONE, THE ONLY
**ORIGINAL
BACKRACK™**

WWW.BACKRACK.COM

SIDERAILS

JOBBER PRICE CODE	5.5 FT BEDS		6.5 FT BEDS		8 FT BEDS	
	F 5.5 FT STANDARD	F 5.5 FT TOOLBOX	F 6.5 FT STANDARD	F 6.5 FT TOOLBOX	F 8 FT STANDARD	F 8 FT TOOLBOX
CHEV/GMC						
2014-2015 Chev/GMC Silverado, Sierra	55520	55520TB	65520	65520TB	80520	80520TB
2007-2013 Chev/GMC Silverado, Sierra	55519	55519TB	65519	65519TB	80519	80519TB
1999-2007 Chev/GMC Classic	NA	NA	65509	65509TB	80509	80509TB
DODGE						
Ram 02-14 8 ft / 2009-14 6.5 ft / 2002-08 All Beds	NA	NA	65517	65517TB	80517	80517TB
Ram 2009-14 5.5 ft Bed Only	NA	NA	NA	NA	NA	NA
Ram 2009-2014 Dodge - 5.5 ft Ram Box	NA	NA	NA	NA	NA	NA
FORD						
1999-2014 Superduty	NA	NA	65501	65501TB	80501	80501TB
2004-2014 Ford F-150	55512	55512TB	65512	65512TB	80512	80512TB

SIDERAILS not compatible with over the rail bedliners.
SIDERAILS are not compatible with Low Profile Drill Hardware Kits.
SIDERAILS are compatible with Standard and Toolbox Hardware Kits.
8 ft SIDERAILS exceed UPS and Fed Ex dimensional limits. Oversize fees applicable.

ACCESSORIES

ACCESSORY DESCRIPTION	PART #
Light Bracket, 11" x 11" Base, Safety Rack Universal	41000
Light Bracket, 6-1/2" Base, Drivers Side	81001
Light Bracket, 6-1/2" Base, Passenger Side	81003
Light Bracket, 10-1/2" Base, Drivers Side	91001
Light Bracket, 10-1/2" Base, Center Mount	91002
Light Bracket, 10-1/2" Base, Passenger Side	91003
Arrow Stick Brackets, 1pr.	91004
Sport Light Brackets (pr)	91005
Light Bar Brackets (pr)	91006
Light Bracket, 16" x 7" Base, Drivers or Passenger Side	91007
Antenna Bracket, 3.50" Square with 7/8" Hole.	91008
Light Bracket, 16" x 7" Base, Center Mount	91002REC
Light Bracket, 16" x 7" Base, Center Mount Folding	91002RECF
Landscape Tool Attachment, Clamp on, Universal for all Racks, 11 Tools	41011
Landscape Tool Attachment, Clamp on, Universal for all Racks, 5 Tool Mini	41005
Mining / Buggy Whip Bracket, Universal for all Racks	41008
Offroad Light Bracket, Clamp on, Universal for all Racks	42005

See website for complete descriptions and images.



For more information visit www.BACKRACK.com

BACKRACK™

FUNCTION AND STYLE FOR TODAY'S TRUCKS

JOBBER APPLICATIONS

BACKRACK™ • SAFETY RACK • LOUVERED RACK

JOBBER PRICE CODE	BACKRACK™ & HARDWARE CHOICE		SAFETY RACK & HARDWARE CHOICE			LOUVERED RACK & HARDWARE CHOICE			TONNEAU	REAR BAR	TB BRKTS - 21"	TB BRKTS - 31"
	A BACKRACK™ STANDARD	A BACKRACK™ TOOLBOX	B + C SAFETY RACK STANDARD	B + C SAFETY RACK TOOLBOX	B + C SAFETY RACK LOW PROFILE DRILL	H + C LOUVERED RACK STANDARD	H + C LOUVERED RACK TOOLBOX	H + C LOUVERED RACK LOW PROFILE DRILL	G TONNEAU COVER ADAPTOR KIT	D REAR BAR	E TOOLBOX BRACKET NO FASTENERS	K TOOLBOX BRACKET NO FASTENERS
CHEV/GMC												
2014-2015 Chev/GMC Silverado, Sierra	10519	10519TB	10500 + 30119	10500 + 30119TB	10500 + 30119LP	12500 + 30119	12500 + 30119TB	12500 + 30119LP	92519	11520	91010	91010-31
2007-2013 Chev/GMC Silverado, Sierra	10519	10519TB	10500 + 30119	10500 + 30119TB	10500 + 30119LP	12500 + 30119	12500 + 30119TB	12500 + 30119LP	92519	11519	91010	91010-31
1999-2007 Chev/GMC Classic	10509	10509TB	10400 + 30109	10400 + 30109TB	NA	12400 + 30109	12400 + 30109TB	NA	92509	11509	91010	91010-31
1988-1998 Chev/GMC CK Series	10503	10503TB	10400 + 30103	10400 + 30103TB	NA	12400 + 30103	12400 + 30103TB	NA	92001	11503	91010	91010-31
1968-1987 Chev/GMC	10504	10504TB	10400 + 30103	10400 + 30103TB	NA	12400 + 30103	12400 + 30103TB	NA	92001	11504C	91010	91010-31
2004-2014 Colorado / Canyon	10316	10316TB	10200 + 30116	10200 + 30116TB	NA	NA	NA	NA	NA	NA	91010C	NA
1985-2005 S10, S15	10312	10312TB	10200 + 30110	10200 + 30110TB	NA	NA	NA	NA	NA	NA	91010C	NA
DODGE												
Ram 02-14 8 ft / 2009-14 6.5 ft / 2002-08 All Beds	10517	10517TB	10400 + 30117	10400 + 30117TB	10500 + 30117LP	12400 + 30117	12400 + 30117TB	12400 + 30117LP	92517	11517	91010	91010-31
Ram 2009-14 5.5 ft Bed Only	10527	10517TB	10400 + 30127	10400 + 30117TB	10400 + 30127LP	12400 + 30127	12400 + 30117TB	12400 + 30127LP	92517	11527	91010	91010-31
Ram 2009-2014 Dodge - 5.5 ft Ram Box	10547**	NA	NA	NA	NA	NA	NA	NA	NA	11527	NA	NA
Ram1994-2001	10507	10507TB	10400 + 30107	10400 + 30107TB	NA	12400 + 30107	12400 + 30107TB	NA	92001	11507	91010	91010-31
Ram 1968-1993 Dodge	10504	10504TB	10400 + 30103	10400 + 30103TB	NA	12400 + 30107	12400 + 30107TB	NA	92001	11504D	91010	91010-31
Dakota 2005-2014	10314	10314TB	10200 + 30113	10200 + 30113TB	NA	NA	NA	NA	NA	NA	91010C	NA
Dakota 1987-2004	10313	10313TB	10200 + 30113	10200 + 30113TB	NA	NA	NA	NA	NA	NA	91010C	NA
FORD												
1999-2014 Superduty	10501	10501TB	10300 + 30201	10300 + 30201TB	10300 + 30201LP	12300 + 30201	12300 + 30201TB	12300 + 30201LP	92501	11501	91011	91011-31
2004-2014 Ford F-150	10512	10512TB	10500 + 30112	10500 + 30112TB	10500 + 30112LP	12500 + 30112	12500 + 30112TB	12500 + 30112LP	92512	11512	91013	91013-31
1997-2003 Ford F-150 (No Supercrew)	10502	10502TB	10400 + 30102	10400 + 30102TB	NA	12400 + 30102	12400 + 30102TB	NA	NA	11502	91012	91012-31
1997-2003 Ford F-150 Supercrew	10502SC	10502SCTB	10400 + 30104	10400 + 30104TB	NA	12400 + 30104	12400 + 30104TB	NA	NA	11502	91010C	NA
1975-1996 Ford F-150 8 ft only	10506	10506TB	10400 + 30106	10400 + 30106TB	NA	12400 + 30106	12400 + 30106TB	NA	92001	11506	91010	91010-31
1975-1996 Ford F-150 6.5 ft only	10505	10506TB	10400 + 30105	10400 + 30106TB	NA	12400 + 30105	12400 + 30106TB	NA	92001	11506	91010	91010-31
1993-2014 Ford Ranger	10311	10311TB	10200 + 30111	10200 + 30111TB	NA	NA	NA	NA	NA	11310R	91010	91010-31
TOYOTA												
2008-2014 Tundra	10518	10518TB	10500 + 30118	10500 + 30118TB	NA	12500 + 30118	12500 + 30118TB	NA	92518	11518	91010	91010-31
1995-2007 Tundra	10508	10508TB	10400 + 30108	10400 + 30108TB	NA	12400 + 30108	12400 + 30108TB	NA	92001	11508	91010	91010-31
2005-2014 Tacoma	10317**	10317TB**	10200 + 30317	10200 + 30317TB	NA	NA	NA	NA	NA	NA	91014	NA
1997-2004 Tacoma	10313	10313TB	10200 + 30113	10200 + 30113TB	NA	NA	NA	NA	NA	NA	91010C	NA
NISSAN												
2004-2014 Titan	10511	10511TB	10400 + 30511	10400 + 30511TB	NA	12400 + 30511	12400 + 30511TB	NA	92001	NA	91010	91010-31
2005-2014 Frontier	10314	10314TB	10200 + 30313	10200 + 30113TB	NA	NA	NA	NA	NA	NA	91010C	NA
1987-2005 Nissan	10313	10313TB	10200 + 30113	10200 + 30113TB	NA	NA	NA	NA	NA	NA	91010C	NA
MAZDA												
1993-2014 Mazda	10311	10311TB	10200 + 30111	10200 + 30111TB	NA	NA	NA	NA	92001	11310R	91010	91010-31

Standard and Toolbox Hardware Kit is no drill on most late model full-size trucks.
 Low Profile Drill Hardware Kit (LP) requires drilling through bed rail.
 Low Profile Drill compatible with Toolboxes.
 SIDE RAILS are not compatible with Low Profile Drill Hardware Kits.
 ** Denotes Hardware Kit and Frame shipped in separate cartons.
 All SAFETY RACKS and LOUVERED RACK require Frame and Hardware Kit (B + C) (H + C).

INSERT RACK

JOBBER PRICE CODE	INSERT RACK & HARDWARE CHOICE			INSERT STYLE (PR)				TONNEAU	REAR BAR	TB BRKTS - 21"	TB BRKTS - 31"
	B + C INSERT RACK STANDARD	B + C INSERT RACK TOOLBOX	B + C INSERT RACK LOW PROFILE DRILL	D INSERT LOUVERS (PR)	C INSERT MESH (PR)	C INSERT ROUND (PR)	D INSERT THREE LIGHT (PR)	G TONNEAU COVER ADAPTOR KIT	D REAR BAR	E TOOLBOX BRACKET NO FASTENERS	K TOOLBOX BRACKET NO FASTENERS
CHEV/GMC											
2014-2015 Chev/GMC Silverado, Sierra	50000 + 30119	50000 + 30119TB	50000 + 30119LP	LV500	SM500	TR500	TL500	92519	11520	91010	91010-31
2007-2013 Chev/GMC Silverado, Sierra	50000 + 30119	50000 + 30119TB	50000 + 30119LP	LV500	SM500	TR500	TL500	92519	11519	91010	91010-31
1999-2007 Chev/GMC Classic	40000 + 30109	40000 + 30109TB	NA	LV400	SM400	TR400	TL400	92509	11509	91010	91010-31
1988-1998 Chev/GMC CK Series	40000 + 30103	40000 + 30103TB	NA	LV400	SM400	TR400	TL400	92001	11503	91010	91010-31
1968-1987 Chev/GMC	40000 + 30103	40000 + 30103TB	NA	LV400	SM400	TR400	TL400	92001	11504C	91010	91010-31
2004-2014 Colorado / Canyon	NA	NA	NA	NA	NA	NA	NA	NA	NA	NA	NA
1985-2005 S10, S15	NA	NA	NA	NA	NA	NA	NA	NA	NA	NA	NA
DODGE											
Ram 02-14 8 ft / 2009-14 6.5 ft / 2002-08 All Beds	40000 + 30117	40000 + 30117TB	40000 + 30117LP	LV400	SM400	TR400	TL400	92517	11517	91010	91010-31
Ram 2009-14 5.5 ft Bed Only	40000 + 30127	40000 + 30117TB	40000 + 30127LP	LV400	SM400	TR400	TL400	92517	11527	91010	91010-31
Ram 2009-2014 Dodge - 5.5 ft Ram Box	NA	NA	NA	NA	NA	NA	NA	NA	NA	NA	NA
Ram1994-2001	40000 + 30107	40000 + 30107TB	NA	LV400	SM400	TR400	TL400	92001	11507	91010	91010-31
Ram 1968-1993 Dodge	40000 + 30103	40000 + 30103TB	NA	LV400	SM400	TR400	TL400	92001	11504D	91010	91010-31
Dakota 2005-2014	NA	NA	NA	NA	NA	NA	NA	NA	NA	NA	NA
Dakota 1987-2004	NA	NA	NA	NA	NA	NA	NA	NA	NA	NA	NA
FORD											
1999-2014 Superduty	30000 + 30201	30000 + 30201TB	30000 + 30201LP	LV300	SM300	TR300	TL300	92501	11501	91011	91011-31
2004-2014 Ford F-150	50000 + 30112	50000 + 30112TB	50000 + 30112LP	LV500	SM500	TR500	TL500	92512	11512	91013	91013-31
1997-2003 Ford F-150 (No Supercrew)	40000 + 30102	40000 + 30102TB	NA	LV400	SM400	TR400	TL400	NA	11502	91012	91012-31
1997-2003 Ford F-150 Supercrew	40000 + 30104	40000 + 30104TB	NA	LV400	SM400	TR400	TL400	NA	11502	91010C	NA
1975-1996 Ford F-150 8 ft only	40000 + 30106	40000 + 30106TB	NA	LV400	SM400	TR400	TL400	92001	11506	91010	91010-31
1975-1996 Ford F-150 6.5 ft only	40000 + 30105	40000 + 30106TB	NA	LV400	SM400	TR400	TL400	92001	11506	91010	91010-31
1993-2014 Ford Ranger	NA	NA	NA	NA	NA	NA	NA	NA	NA	NA	91010-31
TOYOTA											
2008-2014 Tundra	50000 + 30118	50000 + 30118TB	NA	LV500	SM500	TR500	TL500	92518	11518	91010	91010-31
1995-2007 Tundra	40000 + 30108	40000 + 30108TB	NA	LV400	SM400	TR400	TL400	92001	11508	91010	91010-31
2005-2014 Tacoma	NA	NA	NA	NA	NA	NA	NA	NA	NA	NA	NA
1997-2004 Tacoma	NA	NA	NA	NA	NA	NA	NA	NA	NA	NA	NA
NISSAN											
2004-2014 Titan	40000 + 30511	40000 + 30511TB	NA	LV400	SM400	TR400	TL400	92001	NA	91010	91010-31
2005-2014 Frontier	NA	NA	NA	NA	NA	NA	NA	NA	NA	NA	NA
1987-2005 Nissan	NA	NA	NA	NA	NA	NA	NA	NA	NA	NA	NA
MAZDA											
1993-2014 Mazda	NA	NA	NA	NA	NA	NA	NA	NA	NA	NA	NA

Standard and Toolbox Hardware Kit is no drill on most late model full-size trucks.
 Low Profile Drill Hardware Kit (LP) requires drilling through bed rail.
 Low Profile Drill compatible with Toolboxes.
 All INSERT RACKS require Frame and Hardware Kit. Inserts not mandatory.
 Tonneau Adaptor Kit compatible with Standard Hardware only (G).
 (Example: 50000 + 30119).
 Toolbox Brackets no Fasteners designed to replace Standard Hardware.
 Fasteners not included.